

# Airbus - 319/320/321 Series Checklist

Designed by: Michael Swannick

Initial Cockpit Preparation	
Interior Lights.....	AS NEEDED Overhead Dome Lights = On
Deicing.....	AS REQUIRED
IF DEICING IS REQUIRED	IF DEICING IS NOT REQUIRED
Engine Bleed Switches = Off APU Bleed Switch = Off Pack Switches = Off Cargo Heat / Hot Air Switch = Off Cabin Pressurization Selector = Auto Ditching Switch = On	Engine Bleed Switches = On APU Bleed Switch = As Required Pack Switches = Off Cargo Heat / Hot Air Switch = Auto Cabin Pressurization Selector = Auto Ditching Switch = Off
ONCE DEICING IS COMPLETE	
	Ditching Switch = Off   Engine Bleed Switches = On APU Bleed Switch = As Required   Cargo Heat / Hot Air = Auto
	Do Not Use APU Bleed Air Until The Following Requirements Have Been Met You Must Wait 1 Minute After APU Start   You Must Wait 15 Minutes After Deicing
Outflow Valve.....	OPEN
Battery Switches.....	OFF Check Battery Voltmeters. Verify You Have A Minimum Of 25 Volts
Battery Switches.....	AUTO
External Power.....	CONNECT
APU Fire Test.....	PERFORM
	APU Fire Switch = Guarded   APU Agent DISCH Indicator Light = Off Press APU Fire Test Button - Confirm That The APU Fire Switch Illuminates Confirm That The Agent SQUIB & DISCH Lights Illuminate Confirm Activation Of The Fire Alarm Bell
APU Master Switch.....	ON
APU Start Switch.....	PRESS
NAV / Logo Lights.....	ON
ADIRS Selectors.....	NAV Initial Alignment Time Of Ten Minutes Is Required - Do Not Move The Aircraft
MCDU.....	SET INERTIAL POSITION You Must Also Complete The INIT A Page In Order To Receive ACARS
Overhead / Forward / Pedestal Preparation	
Oxygen Crew Supply.....	ON
Landing Gear Lever.....	DOWN
ECAM Brightness.....	AS NEEDED
	ENG ECAM - Confirm A Minimum Of 17 Quarts Oil HYD ECAM - Confirm Normal Hydraulic Quantity DOOR ECAM - Confirm A Minimum Oxygen Pressure Of 850 PSI
Flaps / Slats.....	CHECK Verify Flaps Lever Matches Flaps / Slats Position Indicator On The ECAM
Speed Brake Lever.....	RETRACTED / DISARMED
Engine Master Switches.....	OFF
Engine Mode Selector.....	NORMAL
Parking Brake.....	SET Confirm Brake Pressure, This Will Ensure That The Brakes Are Set
Brake & Accumulator.....	CHECK IF ACCUMULATOR PRESSURE IS LOW Place The PTU Switch In The Off Position Cycle The Yellow Electric Pump Switch On/Off Place The PTU Switch In The Auto Position
Emergency Equipment.....	CHECK
Protective Breathing Equipment (PBE).....	CHECK
MCDU.....	PROGRAM
Maintenance Status.....	CONFIRM
OBS Audio ENT Switch.....	ON
Terrain System Switch.....	ON
Recorder Ground Control Switch.....	ON
CVR Test.....	PRESS / HOLD Parking Brake Must Be On When Performing This Test
Seatbelt Sign.....	OFF
No Smoking Sign.....	ON
Emergency Exit Light Selector.....	ARM
Annunciator Light Selector.....	TEST
Wing Anti Ice.....	OFF
Engine Anti Ice.....	OFF
Probe / Window Heat.....	AUTO
Cabin Pressure Landing Elevator.....	AUTO Confirm "LDG ELEV AUTO" Is Displayed On The PRESS ECAM Display
APU Bleed Switch.....	AS REQUIRED
Cross Bleed Selector.....	AUTO
Pack Flow Selector.....	AS REQUIRED Less Than 115 Passengers = LO   Hot or Humid Weather = HIGH All Other Conditions = NORM
Battery Charge Current.....	CHECK Cycle BAT 1 & BAT 2 Off/Auto Confirm BAT 1 & BAT 2 Are Below 60 Amps & Falling On The ELEC ECAM Display
Fuel Pump Switches.....	ON
Fuel Mode Selector.....	AUTO
Engine Fire Test (Engine 1 & Engine 2).....	
	PERFORM Engine Fire Switch = Guarded   Engine Agent DISCH Indicator Light = Off Press Engine Fire Test Button - Confirm That The Engine Fire Switch Illuminates Confirm That The Engine Agent SQUIB & DISCH Lights Illuminate Confirm Activation Of The Engine Fire Alarm Bell Perform Engine fire Test On Both Engines
APU Fire Test.....	
	PERFORM APU Fire Switch = Guarded   APU Agent DISCH Indicator Light = Off Press APU Fire Test Button - Confirm That The APU Fire Switch Illuminates Confirm That The APU Agent SQUIB & DISCH Lights Illuminate Confirm Activation Of The APU Fire Alarm Bell
Overhead Maintenance Panel.....	
	CHECK Audio Switching Selector..... NORMAL Observers Audio Control Panel..... SET Observers RMP..... SET AFT Cargo Heat (A320 Only)..... MID RANGE Cargo Smoke..... TEST Barometric Reference..... SET Flight Director..... ON ILS / LS..... AS REQUIRED EFIS Control Panel..... SET VOR / ADF Selectors..... AS REQUIRED Flight control Unit (FCU)..... CHECK Verify That The Speed / Mach Indicator Displays Dashes Verify That The Heading / Track Indicator Displays Dashes Set The HDG V/S - TRK FPA To HDG V/S   Set Your Initial or Expected Altitude
Microphone & Oxygen Mask.....	
	TEST Sliding Window..... CLOSED & LOCKED PFD & ND Brightness..... SET Ensure The EGPWS & Radar Displays Are Visible
EGPWS Terrain System Switch.....	
	VERIFY ON PFD..... CHECK ND..... CHECK Standby Airspeed Indicator..... CHECK Standby Altimeter..... CHECK Standby Attitude Indicator..... CHECK Anti Skid / Steering Switch..... ON Clock..... CHECK / SET Switching Panel Selectors..... NORMAL ECAM (Warning / Caution Messages)..... RECALL ECAM Status Display..... CHECK Radio Management Panel (RMP)..... SET Audio Control Panel (ACP)..... AS REQUIRED Weather Radar..... OFF Predicted Wind Sheer (PWS)..... OFF Speed Brake Lever..... RETRACTED / DISARMED Gravity Gear Extension Handle..... STOWED Passenger Address System..... CHECK Parking Brake..... SET Confirm Brake Pressure, This Will Ensure That The Brakes Are Set
Thrust Levers.....	
	IDLE
Transponder Mode.....	
	STANDBY
Final cockpit Preparation	
ATC Clearance.....	OBTAIN
Flight Control Unit (FCU).....	SET / CONFIRM Enter Your First Altitude Restriction or Enter The Lowest Altitude Restriction Depicted On The Departure SID
PFD.....	CHECK / SET Verify The Following V2 Is Set, V1 Is Set, CLB & NAV Modes Are Armed, FCU Altitude Is Displayed
APU.....	START The APU May Already Be Running
External Power Switch.....	OFF Notify Ground Crew, Cleared To Disconnect External Power
Fuel Quantity.....	CHECK
EFIS Control Panel.....	CHECK / SET
Departure Briefing.....	COMPLETE
Seatbelt Sign.....	ON
Nose Wheel Steering Disconnect.....	VERIFY ECAM "NW STRG DISC" Message Will Illuminate
A/Skid & N/W STRG Switch.....	OFF ECAM "Brakes Anti Skid/NWS = Off" Message Will Illuminate
Parking Brake.....	SET Confirm Brake Pressure, This Will Ensure That The Brakes Are Set
Before Pushback	
Windows.....	CLOSED / LOCKED
Exterior Doors.....	CLOSED / ARMED
Cockpit Door.....	CLOSED / LOCKED
Cabin Preparation.....	COMPLETE