


LAHR APP CON
123.825 384.45
SOLLINGEN TOWER *
129.0 310.7
PAR
ATIS
370.4

For MSL altitude use
local altimeter setting,
for FL use 29.92.

CAUTION: Do not
overfly chemical
plant (R-230 2.7 NM)
SW of SLN.

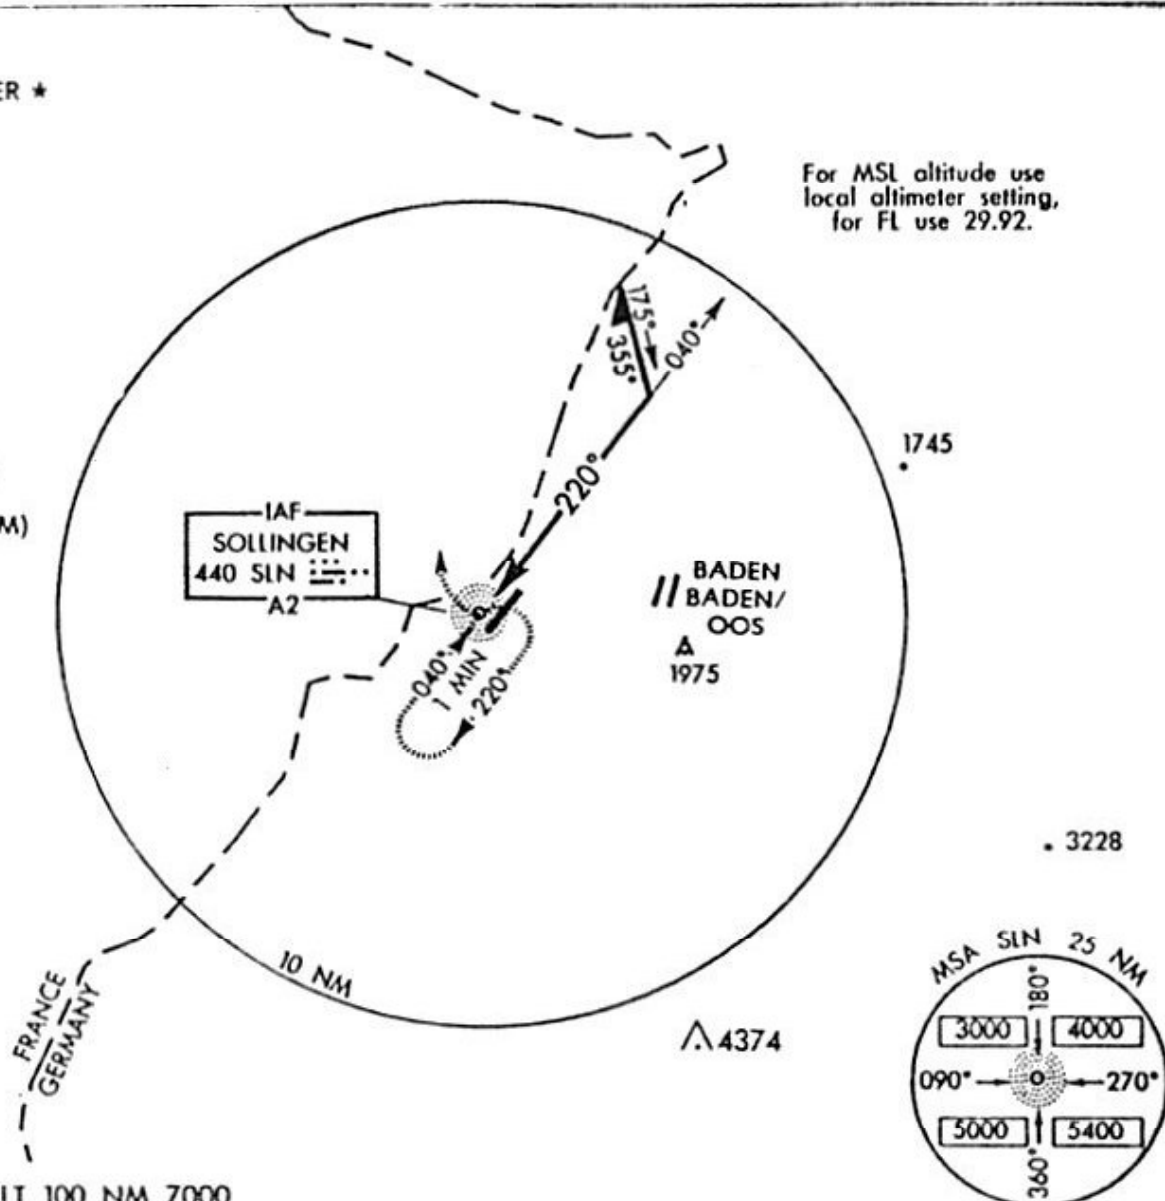


EMERG SAFE ALT 100 NM 7000

MISSED APPROACH
Right turn climbing to
6000 on 355° then right
turn home on NDB
and hold.

TA 5000

NDB


Remain
within 10 NM

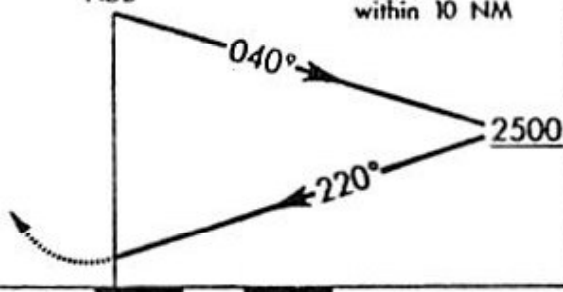

ELEV 405

220° to
NDB

TDZE
404

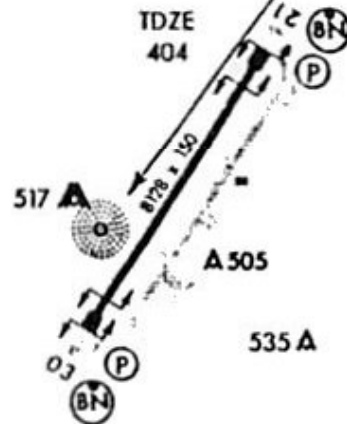

REIL Rwy 03-21
HIRL Rwy 03-21

CATEGORY	A	B	C	D	E
S-21	1100-2800m 696 (700-2800m)			1100-3200m 696 (700-3200m)	
CIRCLING*	1100-2800m 695 (700-2800m)		1100-3200m 695 (700-3200m)	1100-4000m 695 (700-4000m)	
S-PAR 21	604/730m	200 (200-800m)		GS 3.0°	

*CAUTION: Make all
maneuvering at min
alt W of field.

NDB 2 RWY 21